

## **Port TWRP MT6575/ 77 ( No LINUX OR CYGWIN NEEDED )**

by [yuweng@xda](#)

Credits :


Russian Master Shifu [Michfood](#)

[Lewa OS Team](#)


Download link

Port TWRP

<http://www.mediafire.com/?dttyr3dx7h234zu>

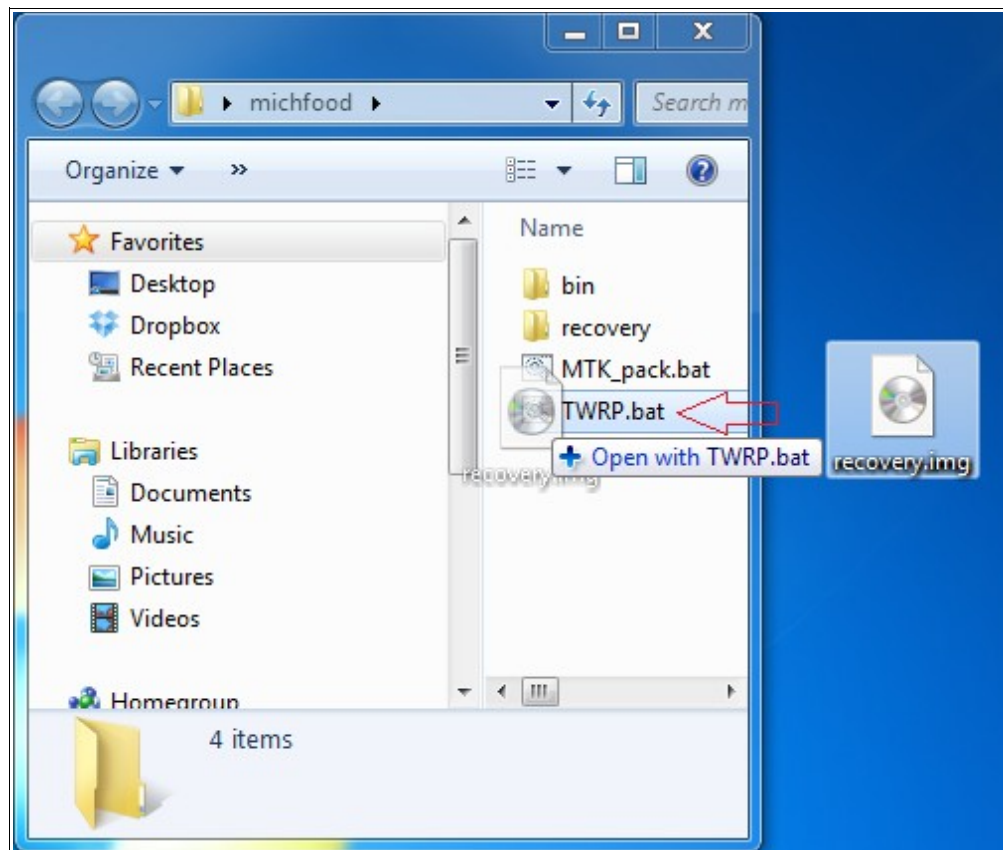

After extract contain, just drag & drop stock [recovery.img](#) to [TWRP.bat](#)

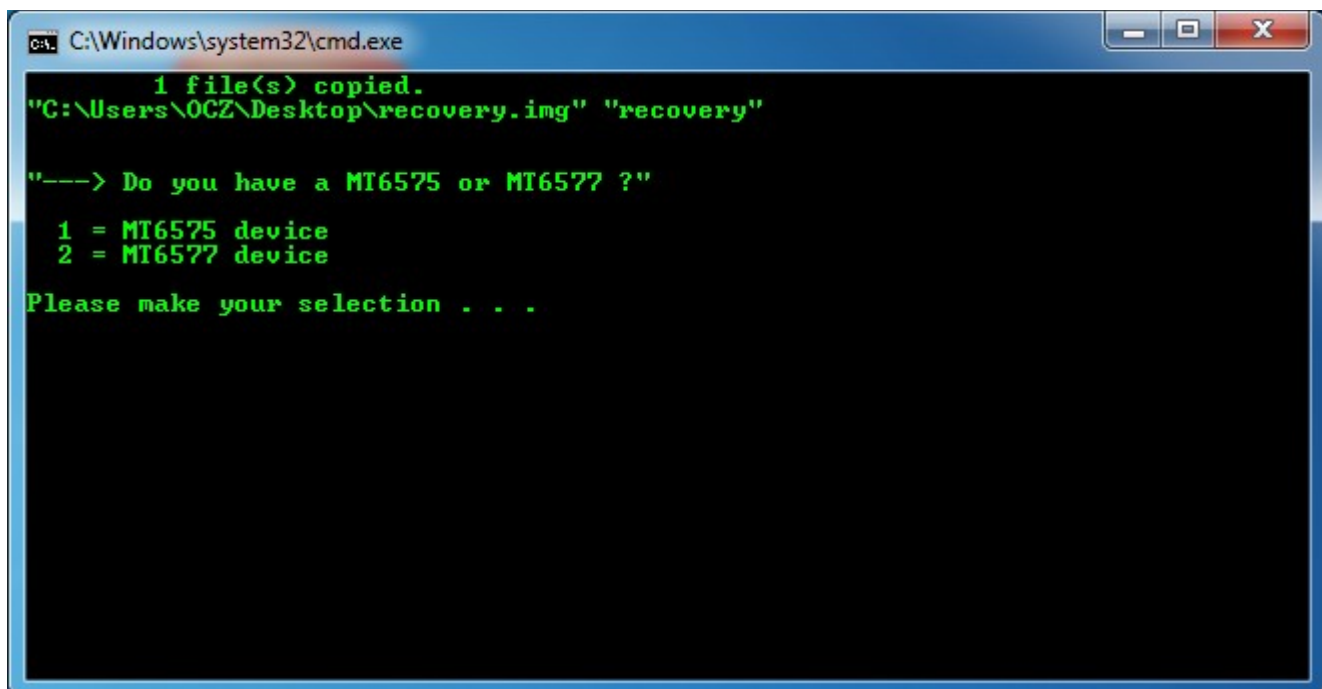

```
C:\Windows\system32\cmd.exe


1 file(s) copied.
"C:\Users\OCZ\Desktop\recovery.img" "recovery"

"---> Do you have a MT6575 or MT6577 ?"

1 = MT6575 device
2 = MT6577 device

Please make your selection . . .
```


It will ask you whether you have a MT6575 or a MT6577 device

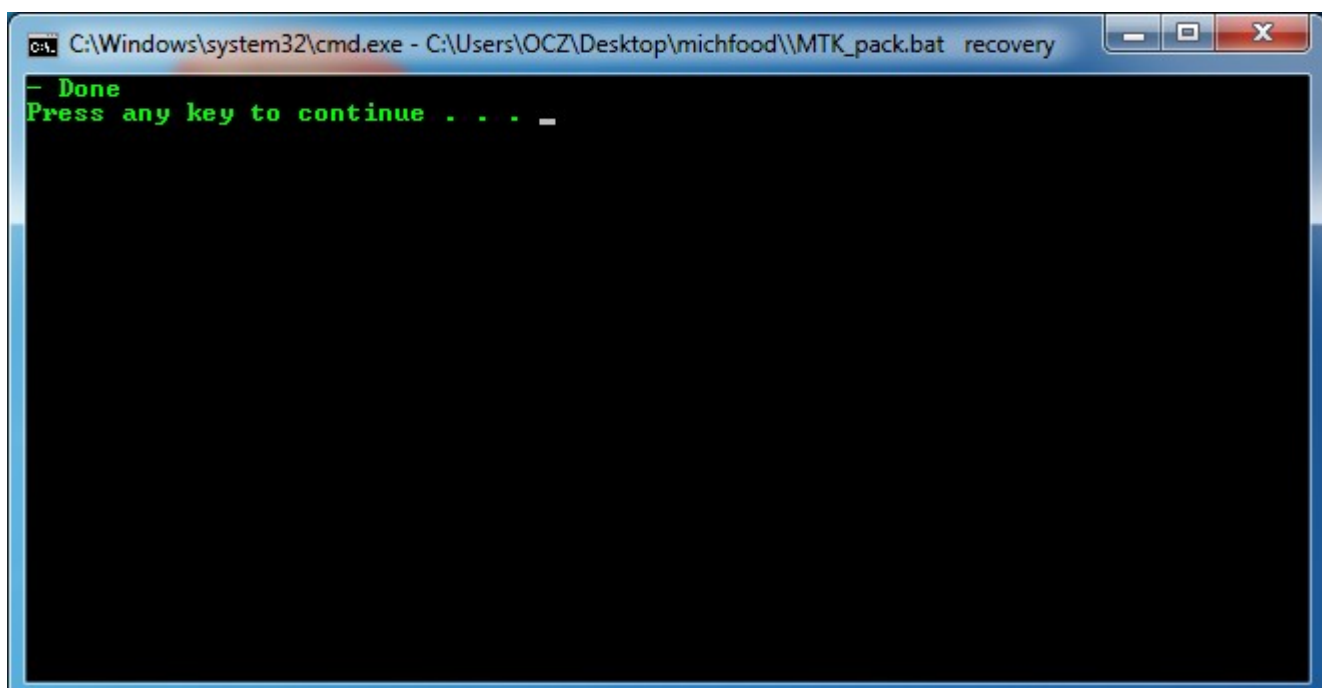

```
C:\Windows\system32\cmd.exe - C:\Users\OCZ\Desktop\michfood\MTK_pack.bat recovery

- Done
Press any key to continue . . . . _
```

After selection, you will see the above message

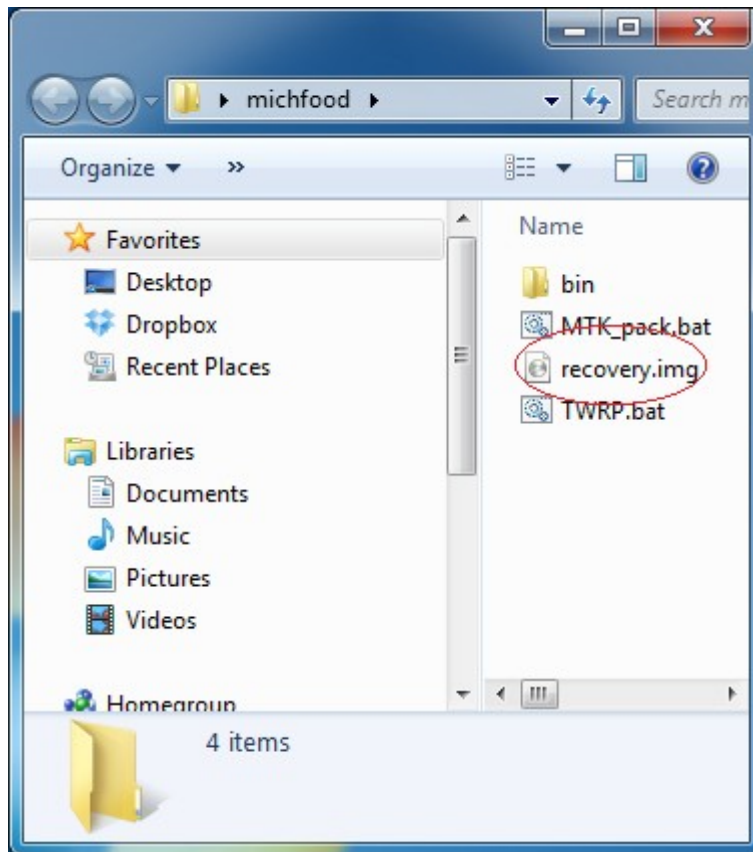

Collect your ported TWRP from [michfood](#) folder

You can use [Mobileuncle Tools](#) to flash ported TWRP [recovery.img](#) if you have root access  
<https://play.google.com/store/apps/details?id=com.mobileuncle.toolbox&hl=en>

If you haven't gain root access then you have to use [SP Flash Tool](#)  
<http://www.mediafire.com/download.php?qwf1452te1s3lxs>

If you haven't got scatter.txt for your device then you'll need [MTK Droid Tools](#)  
<http://ge.tt/2iwURnS/v/0>



LeWa Recovery System v1.0

Battery: 98%

Install

Wipe

Backup

Restore

Mount

Settings

Advanced

Reboot

